

SUZUKI

PARTS CATALOGUE

SUZUKI

TR500

CONTENTS

ENGINE	1-3
Cylinder	1
Piston	1
Crankshaft	1
Crankcase	1
Carburetor	1
Muffler	2
Clutch	2
Ignition coil	2
Transmission	3
Magneto	3
PEI Unit	3
CHASSY	4-8
Meter	4
Frame	4
Brake	4
Fuel tank	5
Oil tank	5
Seat	5
Steering	5
Front wheel	6
Grip	6
Lever	6
Switch	6
Cable	6
Choke lever	7
Rear wheel	7
Rear fender	8
Cowling	8

ENGINE

Ref.No.	Part No.	Description	Q'ty	Remarks
CYLINDER				
1	11111-15200	CYLINDER HEAD, RH	1	
2	11121-15200	CYLINDER HEAD, LH	1	
3	11141-15200	GASKET, cylinder head	1	T:0.5
4	11142-15200	GASKET, cylinder head	1	T:0.3
5	09482-00028	SPARK PLUG	2	NGK B10.5EP
6	11210-15200	CYLINDER, RH	1	
7	11220-15200	CYLINDER, LH	1	
PISTON				
8	12110-15200	PISTON, RH	1	
9	12120-15200	PISTON, LH	1	
10	12141-15200	RING, piston	4	
CRANKSHAFT				
11	12200-15200	CRANKSHAFT ASSY	1	
12	12271-15200	RING, crankshaft outer	2	
CRANKCASE				
13	11300-15200	CRANKCASE ASSY	1	
14	11351-15200	COVER, magneto	1	
15	11611-15200	BOLT, engine mounting front	1	L:190, D:12screw
16	11612-15200	BOLT, engine mounting middle	1	L:232, D:12screw
17	11613-15200	BOLT, engine mounting rear	1	L:228.5, D:12screw
CARBURETOR				
18	13200-15210	CARBURETOR ASSY	2	
19	13910-15200	HOSE, fuel	2	L:350

ENGINE

Ref.No.	Part No.	Description	Q'ty	Remarks
MUFFLER				
1	14301-15200	MUFFLER ASSY, RH	1	
2	14302-15200	MUFFLER ASSY, LH	1	
3	14154-15200	FLANGE, exhaust pipe	2	
4	14156-15200	GASKET, exhaust pipe	2	
5	14158-15200	HOOK, exhaust pipe flange	4	
5-1	14770-15200	DAMPER, muffler support	2	
5-2	14183-16100	SPRING, exhaust pipe	4	
CLUTCH				
6	21111-15200	GEAR, primary drive	1	NT:31
7	21210-15200	GEAR, primary driven	1	NT:68
8	09263-28002	BEARING	1	
9	21411-15200	HUB, clutch sleeve	1	
10	21441-15200	PLATE, clutch drive	9	
11	21451-15200	PLATE, clutch driven (1)	8	
12	21452-15200	PLATE, clutch driven (2)	1	
13	21453-15200	RING, drive plate expan	9	
14	21462-15200	DISK, clutch pressure	1	
15	09440-16002	SPRING	6	
16	22522-15200	SPACER, clutch spring	6	
17	09160-06042	WASHER	6	6.5x17x1.6
18	01112-06458	BOLT	6	
19	09140-22005	NUT, clutch sleeve hub	1	
20	09167-22010	WASHER, clutch sleeve hub	1	
21	23121-15200	ROD, clutch release	1	L:55
21-1	09166-20005	WASHER, primary drive	1	
21-2	27511-15200	SPROCKET, engine	1	
IGNITION COIL				
22	33410-15200	COIL ASSY, ignition RH	1	
23	33420-15200	COIL ASSY, ignition LH	1	

ENGINE

Ref.No.	Part No.	Description	Q'ty	Remarks
TRANSMISSION				
1	24120-15200	SHAFT, counter	1	1st Drive 15T. 2nd Drive 18T.
2	24231-15200	GEAR, 3rd drive	1	NT:20
3	24241-15200	GEAR, 4th drive	1	NT:22
4	24251-15200	GEAR, 5th drive	1	NT:23
5	24131-15200	SHAFT, drive	1	NT:18
6	24311-15200	GEAR, 1st driven	1	NT:27
7	24321-15200	GEAR, 2nd driven	1	NT:24
8	24331-15200	GEAR, 3rd driven	1	NT:22
9	24341-15200	GEAR, 4th driven	1	NT:21
10	24351-15200	GEAR, 5th driven	1	NT:20
11	24881-15200	PLATE, oil guide	1	
12	25611-15200	LEVER, gear shifting LH	1	
13	25621-15200	LEVER, gear shifting RH	1	
14	26211-15200	SHAFT, tachometer drive gear	1	
15	09243-22001	PLUG	1	
16	26241-15200	GEAR, tachometer drive	1	NT:22
MAGNETO				
17	31400-15200	PEI MAGNETO ASSY	1	
18	09100-08093	BOLT, PEI magneto	1	
19	09160-08033	WASHER, PEI magneto	1	8.5x20x2.6
20	31511-15200	BOLT, PEI magneto	1	L:58.5
PEI UNIT				
21	31910-15200	PEI UNIT ASSY, RH	1	
22	31920-15200	PEI UNIT ASSY, LH	1	

CHASSY

Ref.No.	Part No.	Description	Q'ty	Remarks
		METER		
1	34200-15200	TACHOMETER ASSY	1	
		FRAME		
2	41100-15200	FRAME		
		BRAKE		
3	43110-15200	PEDAL, brake RH	1	
4	43120-15200	PEDAL, brake LH	1	
5	43151-15200	BOLT, brake pedal	1	L:31.5, D:10screw
6	09200-06025	PIN, brake pedal	4	
7	43211-15200	HOLDER, brake cable end	1	
8	43312-15200	END, front brake cable	3	
9	58110-15200	CABLE ASSY, front brake upper	1	
10	58180-15200	CABLE ASSY, front brake lower RH	1	
11	58190-15200	CABLE ASSY, front brake lower LH	1	
12	58195-15200	PIECE, front brake cable joint	1	
13	58196-15200	BOX, front brake cable joint	1	
14	58197-15200	COVER, front brake cable joint	1	
15	58611-15200	CLIP, front brake cable	2	
16	58510-15200	CABLE ASSY, rear brake RH	1	
17	58520-15200	CABLE ASSY, rear brake LH	1	

CHASSY

Ref.No.	Part No.	Description	Q'ty	Remarks
FUEL TANK				
1	44110-15200	TANK, fuel	1	
2	44121-15200	INLET, fuel tank	1	
3	44123-15200	GASKET, fuel tank inlet	1	
4	02141-04127	SCREW	8	
5	44141-15200	CAP, fuel tank filler	1	
6	44142-15200	SPRING, fuel tank filler cap	1	
7	09462-00061	BAND, fuel tank front	1	
8	09462-00060	BAND, fuel tank rear	1	
9	44551-15200	HOOK, fuel tank front band	1	
10	44211-15200	CAP, fuel tank breather	1	
11	44213-15200	BREATHER, fuel tank	1	
12	44215-15200	HOSE, fuel tank breather	1	L:350, ID:4
13	44300-15200	COCK ASSY, fuel	1	
OIL TANK				
14	44611-15200	TANK, oil	1	
SEAT				
15	45100-15200	SEAT	1	
STEERING				
16	51411-15200	SHAFT, steering	1	
17	51631-15200	NUT, steering stem	1	
18	51172-15200	SPACER, front fork spring	2	22x29.5x20
19	51700-15200	DAMPER ASSY, steering	1	

CHASSY

Ref.No.	Part No.	Description	Q'ty	Remarks
FRONT WHEEL				
1	54711-15200	AXLE, front	1	L:242
2	09141-14003	NUT, front axle	1	
3	09160-15024	WASHER, front hub LH	1	
4	09160-15025	WASHER, front hub RH	1	
5	54811-15200	BAR, front torque link	2	
6	56151-15200	SPRING, cable adjuster	2	
GRIP				
7	57100-15111	THROTTLE GRIP	1	
8	57111-15200	RUBBER, throttle grip	1	
9	57211-15200	RUBBER, left grip	1	
LEVER				
10	57300-15200	LEVER ASSY, brake	1	
11	57500-15200	LEVER ASSY, clutch	1	
SWITCH				
12	57700-15200	SWITCH ASSY, engine stop	1	
CABLE				
13	58200-15200	CABLE ASSY, clutch	1	
14	58300-15200	CABLE ASSY, throttle	1	
15	58400-15200	CABLE ASSY, starter	1	

CHASSY

Ref.No.	Part No.	Description	Q'ty	Remarks
CHOKE LEVER				
1	58711-15200	HOLDER, choke lever	1	
2	58721-15200	LEVER, choke	1	
3	58722-15200	PIECE, choke lever spring push	1	
4	58723-15200	SPRING, choke lever	1	
5	58724-15200	WASHER, choke lever	1	10x22x2
6	58725-15200	SHAFT, choke lever	1	L:45.5
7	58731-15200	STOPPER, choke cable	1	
8	58740-15200	CAP, choke lever	1	
REAR WHEEL				
9	61100-15200	SWINGING ARM, rear	1	
10	61411-15200	COLLAR, chain adjuster	1	L:29.5, ID:15.3
11	09140-22006	NUT		
12	61431-15200	SPACER, rear hub, LH	1	15.3x32x5.8
13	61441-15200	SPACER, rear hub, RH	1	15.3x32x16.2
14	61450-15200	ADJUSTER, chain, LH	1	
15	61460-15200	ADJUSTER, chain, RH	1	
16	64311-15200	BAR, rear torque link	1	
17	64321-15200	BOLT, rear torque link	1	L:22, D:10screw
18	64513-15200	SPROCKET, rear	1	NT:30
19	64514-15200	SPROCKET, rear	1	NT:31
20	64515-15200	SPROCKET, rear	1	NT:32
21	64711-15200	AXLE, rear	1	L:269
22	09141-14003	NUT	1	

CHASSY

Ref.No.	Part No.	Description	Q'ty	Remarks
REAR FENDER				
1	63111-15200	FENDER, rear	1	
COWLING				
2	99410-15200	COWLING ASSY	1	
3	94421-15200	WINDOW, cowling	1	
4	94510-15200	BRACE, cowling, front	1	
5	94530-15200	BRACE, cowling, rear	2	
6	94570-15200	CUSHION, cowling	5	
7	94591-15200	SCREW, cowling fitting	5	L:14, D:6screw
8	94581-15200	PLATE, sign fastner	9	



SUZUKI MOTOR CO., LTD.

Head Office P.O.Box 116. Hamamatsu Japan

SUZUKI TR500 PARTS CATALOGUE

Printed in Apr., 1972.

Published in Apr., 1972.

Editor : SUZUKI MOTOR Co., LTD.

Export parts section

Reprint Prohibited